


**Data Code**  
 First 2 digits - Year  
 Second 2 digits - Month  
 Third 2 digits - Day  
 Below  
 15 for Year  
 10 for Month  
 30 for Day



Europe Toaster  
 Switchable Bread/Bagel Controls  
 Four 1½" Extra-wide Slots  
**WCT850E - 038276**

WARING COMMERCIAL™  
 TORRINGTON, CT 06790  
 www.waringproducts.com  
 HEAVY-DUTY SWITCHABLE BREAD/BAGEL TOASTER  
 MODEL: WCT850E  
 220-240VAC 50/60Hz 2265-2700W MADE IN CHINA

S/N:0012300001

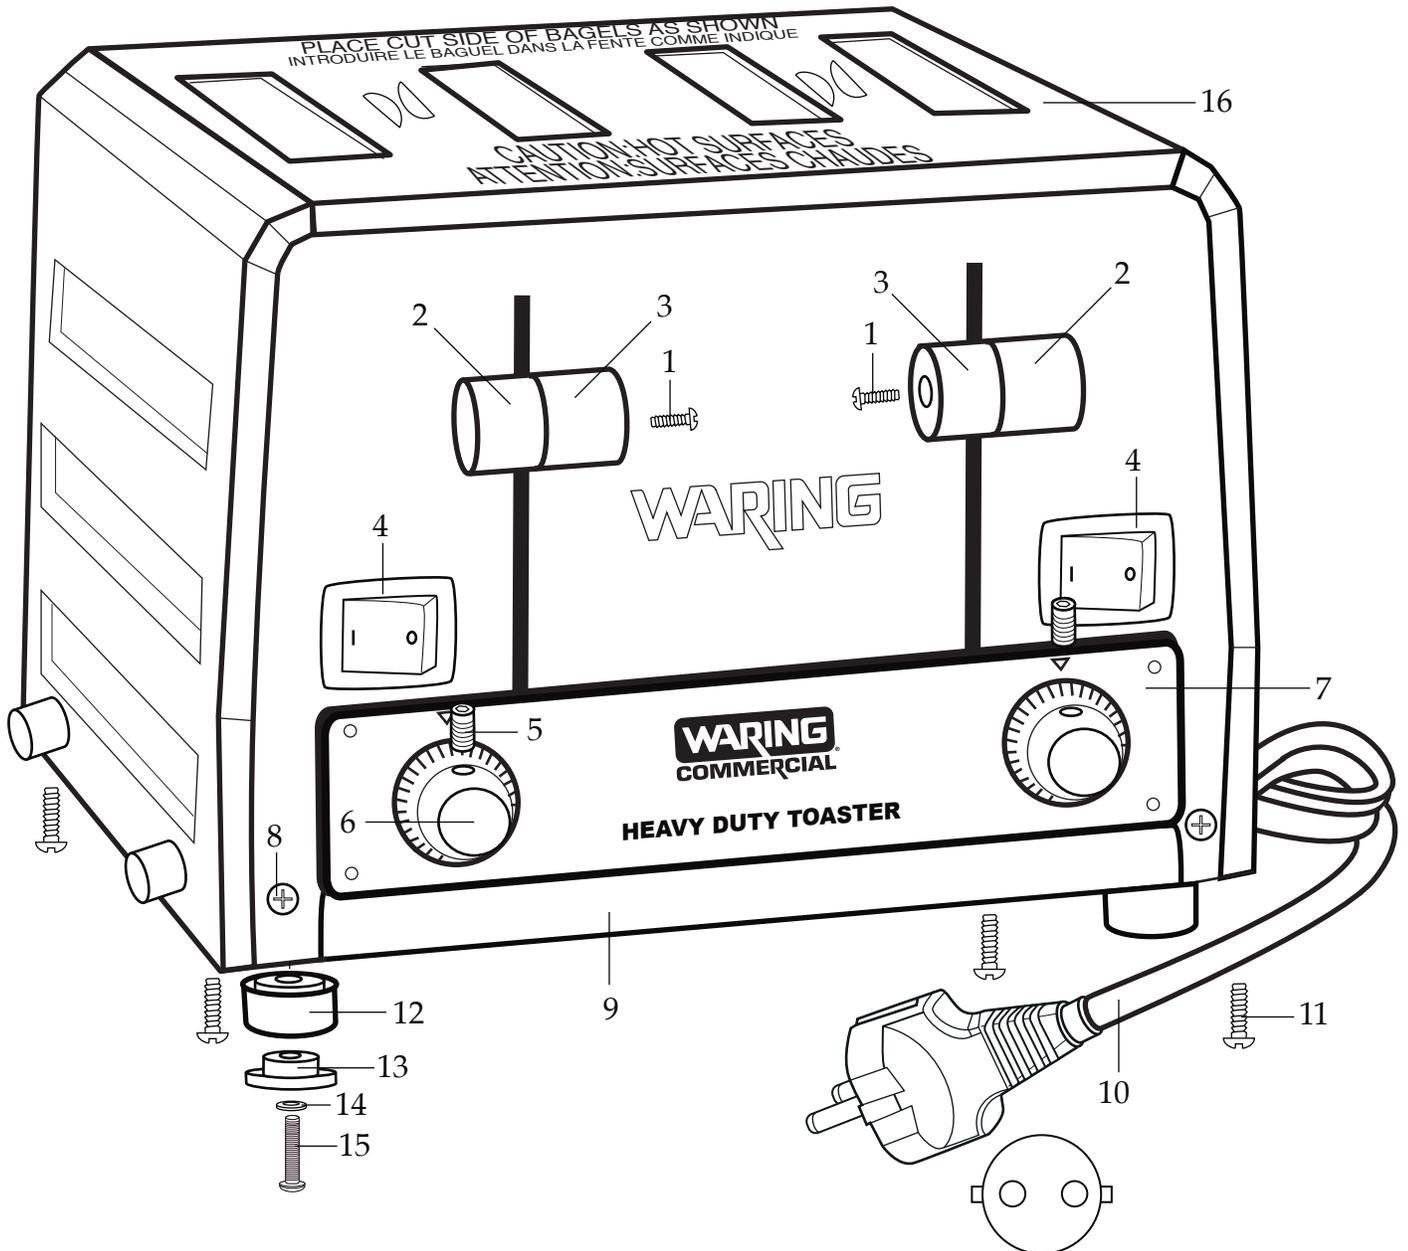



<b>Illustration#</b>	<b>Part#</b>	<b>Description</b>
1	027172	Screw (2 required)
2	027170	Push Knob (flat outer center (2 required)
3	027171	Push Knob (screw hole in outer center 2 required)
4	033455	Rocker Switch (2 required)
5	027173	Set Screw (2 required)
6	027174	Browning Control Knob (2 required)
7	502939	Front Panel Assembly
8	027177	Screw (2 required)
9	033459	Crumb Tray
10	038272	Cord
11	027177	Screw (4 required)
12	027178	Foot (4 required)
13	027179	Rubber Foot (4 required)
14	027180	Washer (4 required)
15	027181	Screw (4 required)
16	038277	Top Housing Cover with Bumpers
17	035070	Elements 120V 375W (4 required)
	037806	Elements 240V 600W (2 required)
		Elements Before 10-28-2015 104V 750W (2 required use 037806)
18	027177	Screw (12 required)
19	027203	Ceramic Insulator Bracket (12 required)
20	027205	Hex Nut with Lock Washer (12 required)
21	038273	Bushing (Strain Relief)
22	027218	Power Box Body
23	027209	Screw (2 required for each PC Board)
24	033454	PC Board (2 required)
25	027211	Lock Washer (ground)
	027213	Screw (ground)
26	027213	Screw (2 required)
27	027215	Hex Nut (2 required)
28	027216	Power Terminal Board
29	038274	Locking Mechanism (2 required)
30	033460	Screw (2 required per insulated bracket plate)
31	027199	Insulated Bracket Plate (2 required)

Illustration#	Part#	Description
32	027193	Screw (2 required per locking mechanism)
33	034769	Screw (2 required per micro switch)
34	033456	Micro Switch (4 required)
35	034767	Micro Switch Cover (2 required)
36	033460	Screw (2 required per micro switch cover)
37	027184	Power Box Cover
38	027177	Screw (4 required)
39	027177	Screw (2 required)
40	027225	Bottom Cover (plate)

**Note When Changing Elements:** Bad elements should be removed one at a time so there is no confusion on what element goes where because some elements are not all the same.

