





Europe Gelato Panini Press


WICSP180E

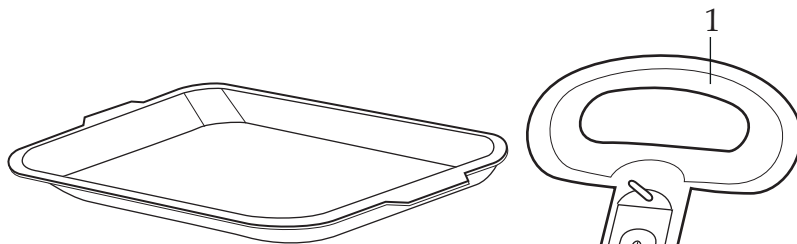









032350
Drip Pan

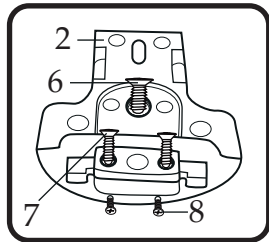

Bottom Handle

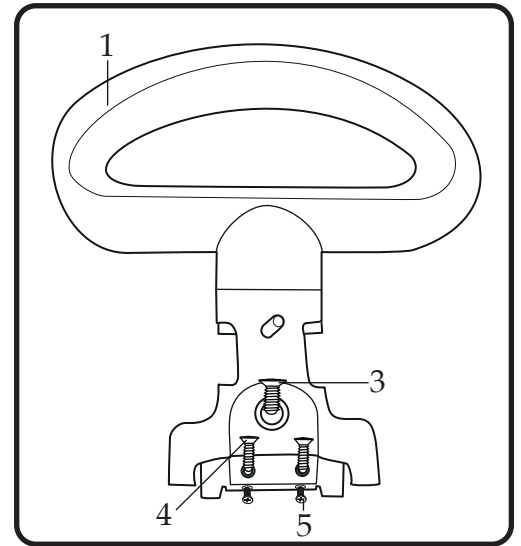

Top Handle

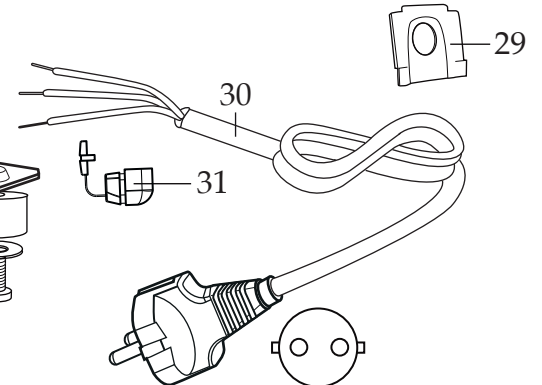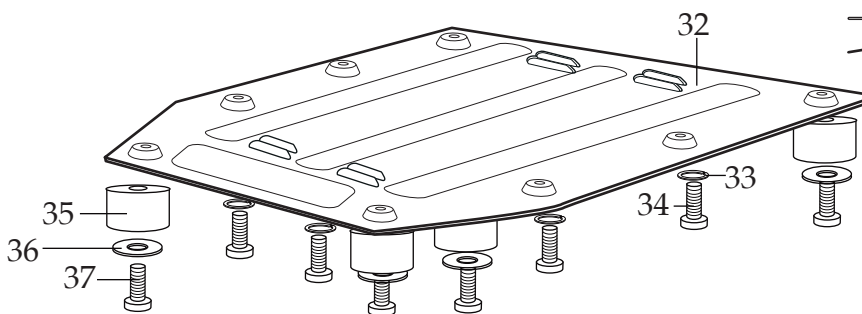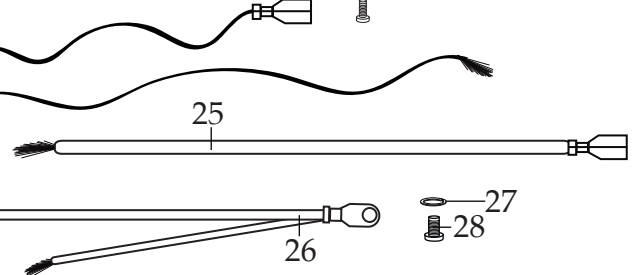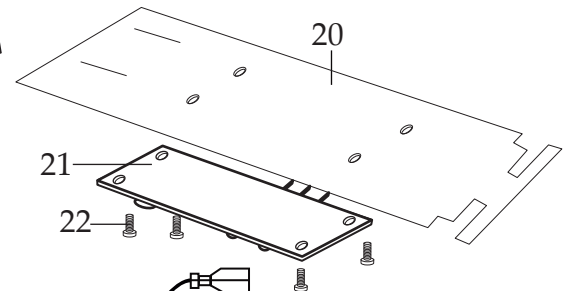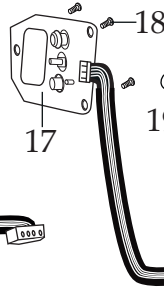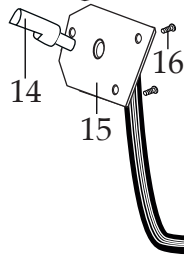  

Illustration#	Part#	Description
1	037958	Top Handle
2	037959	Bottom Handle
3	037537	Screw
4	037960	Screw (2 required)
5	037493	Screw (2 required)
6	037537	Screw
7	037960	Screw (2 required)
8	037493	Screw (2 required)
9	037537	Screw (2 required on top plate and bottom plate)
10	032352	Knob
11	035321	Toggle Switch Boot
12	016236	Hex Nut
13	037931	Locking Ring
14	036241	Connector Pole
15	035316	Darkness Control Board
16	032359	Screw (3 required)
17	037961	Control Board
18	032359	Screw (3 required)
19	037962	Toggle Switch with Leads
20	030638	Power Board Shield
21	037963	PCB Board
22	032359	Screw (4 required)
23	019123 012409	Large Crimp Connector Small Crimp Connector (3 required)
24	013731	Wire Tie
25	035348	10.25" Black Lead Assembly

Illustration#	Part#	Description
26	035345	Double Green / Yellow Lead
27	032751	Ground Spring Washer
28	035298	Ground Screw
29	032371	Cord Plate
30	032748	Cord Set
31	035476	Strain Relief
32	032351	Bottom Plate
33	032360	Spring Washer (4 required)
34	032750	Screw (4 required)
35	032353	Foot (4 required)
36	032354	Foot Washer (4 required)
37	032355	Foot Screw (4 required)